

## **ZADI Locks**

### **Door Lock, Left Hand**

#### **To fit the Barrel to the Lock**

Place the lock key into the Lock Barrel.

With the key vertical and the leading tumbler of the barrel at the top, press the barrel into the lock ensuring that the seal around the barrel is fitting correctly into the housing behind the barrel head. Please note, at this stage the barrel will not enter the housing fully, and the use of force to press the barrel home will result in the outer lock being damaged.

Turn the key clockwise a further 90° and press fully home. When the key is released the spring action will set the key in the vertical position ready for the key to be removed and normal operation to begin.

#### **To remove the Lock Barrel from the Lock**

Place the lock key into the vertical slot of the barrel.

Turn the key clockwise 90° and remove the key.

The slot of the barrel should now be in a horizontal position.

Place the Barrel Removal Tool into the lock and remove the barrel. If the tool is removed without the barrel, turn the key over and replace the tool whilst removing again. When using a new tool for the first time it may not locate correctly, remove and try again.

To release the tool from the barrel press in the tumbler nearest the finger grip and withdraw.

#### **PLEASE NOTE:**

If the Barrel Removal Tool is inserted into the barrel in the incorrect position removal can only be done with force and can result in the barrel being damaged.